



AMPAK

AP6155G

Evaluation Kits

User manual

Version 1.0

Revision History

Date	Revision Content	Revised By	Version
2021/09/03	Initial released	Miller	1.0

1. AP6155G and AP6168G Evaluation Board Introduction

AP6155G and AP6168G Evaluation board (EVB) likes as figure1.

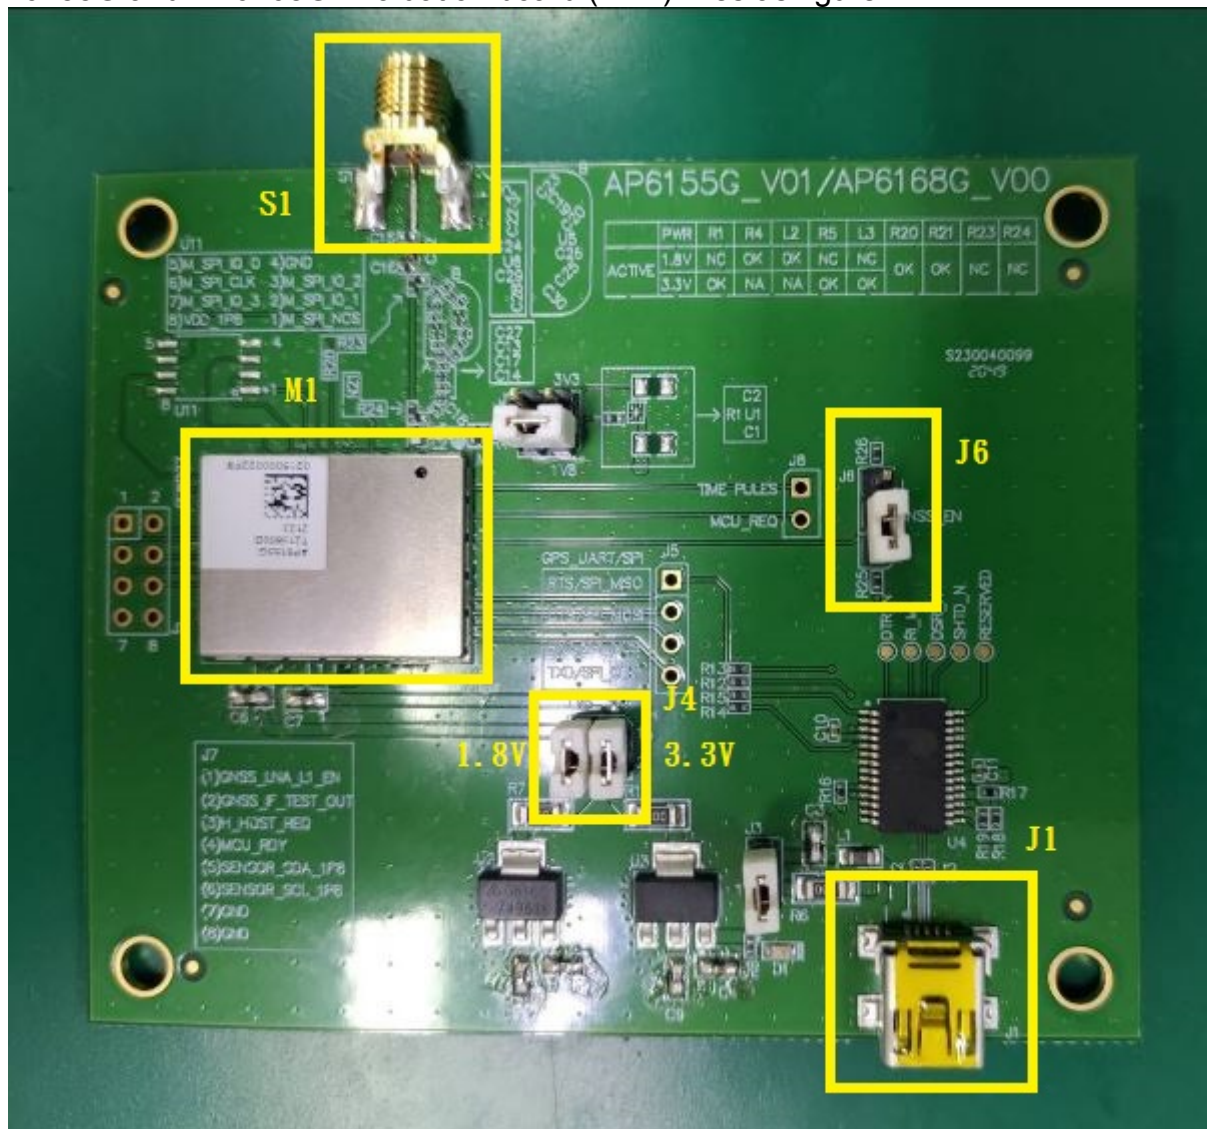


Figure1. Top view of AP6155G and AP6168G EVB

Interface highlights:

1. M1: AP6155G and AP6168G SIP module.
2. J4: 1V8/3V3 for main system power path.
3. J6: Enable or disable GPS function.
4. J1: The mini USB is DC_5V and USB to RS232 input connector.
5. S1: SMA connector let GSPL1+L5 band RF signal input path, you can connect to L1+L5 RF cable or Dipole antenna.